

# Breakers

available for hire or purchase from  
Coyle Equipment services!



London: 0208 903 8020 - [info@cesbreakerhire.co.uk](mailto:info@cesbreakerhire.co.uk)  
Birmingham: 01527 336 116 - [midlands@cesbreakerhire.co.uk](mailto:midlands@cesbreakerhire.co.uk)  
South West: 0117 203 4368 - [southwest@cesbreakerhire.co.uk](mailto:southwest@cesbreakerhire.co.uk)

[www.cesbreakerhire.co.uk](http://www.cesbreakerhire.co.uk)



## Mini-range B80 - B300

Unit			B 80	B 100	B 150	B 200	B 300
Total weight	Box type	kg	83	113	210	270	360
Total length	Box type	mm	1115	1115	1279	1446	1652
Working flow		l/min	15-30	15-30	20-40	20-50	40-70
Set pressure		bar	130	130	140	150	160
Working pressure		bar	90-120	90-120	90-120	90-120	110-140
Impact frequency		bpm	800-1400	800-1400	700-1200	600-1100	500-900
Oil pipe size		inch	1/2	0.5	0.5	0.5	1/2
Diameter of chisel		mm	40	40	45	53	68
Length of chisel		mm	450	450	500	580	700
Back head pressure		bar	14-17	14-17	14-17	14-17	14-17
Accumulator pressure		bar	/	/	/	/	55-60
Noise Level		m	2-5	2-5	3-6	4-8	5-10
Excavator		t	0.5-2	0.8-3	1-3.5	3-5	5-8

## Midi-range B350 - B1000

Unit			B 350	B 400	B 1000
Total weight	Box type	kg	460	600	950
Total length	Box type	mm	1862	2140	2310
Working flow		l/min	50-90	60-100	80-110
Set pressure		bar	180	180	210
Working pressure		bar	120-150	130-160	150-170
Impact frequency		bpm	400-800	400-800	350-700
Oil pipe size		inch	1/2	3/4	3/4
Diameter of chisel		mm	75	85	100
Length of chisel		mm	750	850	1000
Back head pressure		bar	14-17	14-17	14-17
Accumulator pressure		bar	55-60	55-60	55-60
Noise Level		m	6-12	6-12	7-14
Excavator		t	5-9	6-11	10-20

London: 0208 903 8020 - [info@cesbreakerhire.co.uk](mailto:info@cesbreakerhire.co.uk)  
 Birmingham: 01527 336 116 - [midlands@cesbreakerhire.co.uk](mailto:midlands@cesbreakerhire.co.uk)  
 South West: 0117 203 4368 - [southwest@cesbreakerhire.co.uk](mailto:southwest@cesbreakerhire.co.uk)

[www.cesbreakerhire.co.uk](http://www.cesbreakerhire.co.uk)



## Large B1800 - B7000


Unit			B 1800	B 2500	B 3000	B 4000	B 4300	B 4500	B 7000
Total weight	Box type	kg	1450	2060	2318	2400	4575	4575	7052
Total length	Box type	mm	2609	2786	3128	3161	3369	3683	4483
Working flow		l/min	90-120	120-180	130-190	180-240	200-260	220-270	340-400
Set pressure		bar	210	210	230	250	260	280	330
Working pressure		bar	150-170	160-180	180-200	200-220	210-230	230-250	280-300
Impact frequency		bpm	350-650	350-500	200-300	200-300	150-300	130-200	90-120
Oil pipe size		inch	1	1	1.25	1.25	1.25	1.25	1.5
Diameter of chisel		mm	125	140	150	155	165	175	210
Length of chisel		mm	1100	1250	1300	1400	1450	1500	1800
Back head pressure		bar	14-17	14-17	6-8	17-20	18-22	25-28	32-35
Accumulator pressure		bar	55-60	55-60	55-60	55-60	55-60	55-60	75-80
Noise Level		m	10-18	16-22	21-30	26-35	35-40	38-45	50-55
Excavator		t	16-25	18-28	28-35	33-45	33-38	45-55	65-100

London: 0208 903 8020 - [info@cesbreakerhire.co.uk](mailto:info@cesbreakerhire.co.uk)  
 Birmingham: 01527 336 116 - [midlands@cesbreakerhire.co.uk](mailto:midlands@cesbreakerhire.co.uk)  
 South West: 0117 203 4368 - [southwest@cesbreakerhire.co.uk](mailto:southwest@cesbreakerhire.co.uk)

[www.cesbreakerhire.co.uk](http://www.cesbreakerhire.co.uk)



	OKB MODEL	80/100	150	200	300	350	350K	400	1000	1800	2500	3000	4000	4300	4500	7000
	CHISEL DIAMETER	40	45	53	68	75	75K	85	100	125	140	150	155	165	175	210
A	Housing Length	686	809	888	1042	1212	1066.5	1357	1476	1613	1724	1865	1939	2086	2423	2991.5
B	Housing Width	120	146	154	201	221	216	230	274	304	343	354	372	388	450	530
C	Mount Cap Width	215	310	310	390	390	390	500	500	560	560	760	760	760	760	840
D	Mount Cap Height	215	360	360	424	424	424	520	520	700	750	850	850	850	850	1035
E	Housing Height	152	233	249	292	298.5	314	352	389	505	572	579	596.5	661	755	890
F	Housing Height	131	160	174	212	221	238	256	296	340	392	424	410	468	500	590
G	Mount Cap Length	142	191	191	200	240	240	275	275	320	385	390	390	378	390	483

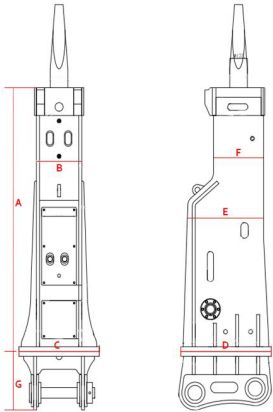

London: 0208 903 8020 - [info@cesbreakerhire.co.uk](mailto:info@cesbreakerhire.co.uk)  
 Birmingham: 01527 336 116 - [midlands@cesbreakerhire.co.uk](mailto:midlands@cesbreakerhire.co.uk)  
 South West: 0117 203 4368 - [southwest@cesbreakerhire.co.uk](mailto:southwest@cesbreakerhire.co.uk)

[www.cesbreakerhire.co.uk](http://www.cesbreakerhire.co.uk)

